




#406 Shower Curtain Rod

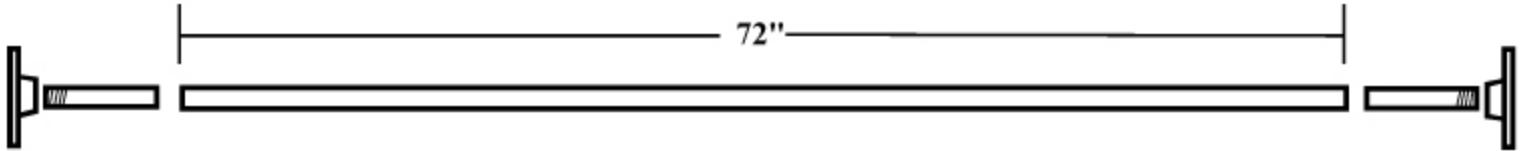

PARTS CHECKLIST

QUANTITY

1	72" SHOWER ROD
2	8" THREADED INSERTS
2	3" CAST WALL BRACKETS
8	SCREWS

INSTALLATION INSTRUCTIONS

MEASURE AREA WHERE CURTAIN ROD WILL BE INSTALLED.

ALLOWING 11/16" THICKNESS FOR EACH WALL BRACKET, TRIM SHOWER CURTAIN ROD TO CORRECT LENGTH.

NOTE: MASK AREA TO BE TRIMMED WITH MASKING TAPE AND USE A TUBING CUTTER TO TRIM.

DRILL WALL FOR SCREW HOLES IN BRACKETS.

**INSERT THREADED INSERTS INTO ROD,
THREAD ON WALL BRACKETS**

**USING EITHER THE SCREWS PROVIDED, OR IF APPROPRIATE,
OTHER SCREWS, WITH APPROPRIATE ANCHORS, ATTACH CURTAIN
ROD TO WALL AT EITHER BRACKET**